

RAINPROOF 3W LED MINI CAMPING LANTERN

This product adopts high power LED as the light source. When using can not only flat, hang, also can rely on the base of built-in strong magnet adsorption in all kinds of iron flat, to adapt to more occasions.

Charge this product via micro USB 5V port.

Switch modes: High Mode→Middle Mode→Low Mode→off. (by press the button once)
SOS Flash Mode→off. (by hold and press the button until it works)

Product Functions & Features

- ▶ Switch modes: High Mode→Middle Mode→Low Mode→off. (by press the button once)
SOS Flash Mode→off. (by hold and press the button until it works)
- ▶ Charge the product with micro USB 5V power source, battery capacity indicator.
- ▶ Rainproof function IP43
- ▶ Max luminous flux is 200 Lm
- ▶ Gradual lighting change setting, let your eyes more comfortable.
- ▶ Light memory function, can open it as same as the last time lighting mode when closed.
- ▶ Built-in lithium battery circuit protection function, prevent overcharge or discharge.
- ▶ Sticking to iron object by built-in magnet, bracket can be 60 degrees rotation.
- ▶ Flexible use of hook design.

Main Technical Parameters

1) Lighting Parameters:

The Max. Luminous Flux of High Mode	200 Lm
The Max. Luminous Flux of Middle Mode	100 Lm
The Max. Luminous Flux of Low Mode	20 Lm
High level lighting time after fully charged	6hours
Middle level lighting time after fully charged	12 hours
Low level lighting time after fully charged	45 hours
Flash level lighting time after fully charged	10 hours

2) Parameters Of External Power Source :

Specification of charge port	micro USB (V8)
Input voltage	5-5.2 V
Max current	700±100 mA
Fully charged time	4-6 hours

5) Others:

Specification of built-in battery	1800mAh, 3.7 V Lithium battery
LED specification	High power 3W white light Color Temp 6000-6500K

3) Main Parts Life-span:

Switch	5000 Times
The plastic part	5 Years
LED	50000 Hours

4) Size And Weight :

Product size	Φ62*53 mm
Product weight	95 g

Operation Method :

- ▶ Lighting:
 - 1). Switch mode 1: High Mode→ Middle Mode→ Low Mode→ off.
Press the button within 5 seconds to choose which light mode you want, then press again to close it. When you open it next time, it will regain the light mode of last time.
 - 2). Switch mode 2: SOS Flash Mode→off.
Hold and press the button until it works, then press again to close it.
- ▶ Charging operation & Battery capacity indicator:
 - 1). Charge its inside battery: open the micro USB port cover, plug in the 5V power, the red indicator will glow while charging and the blue indicator will light while being fully charged.
 - 2). When open this product, the indicator will light four different colors. Blue light means battery capacity is the highest, orange light means high, green light means ok, red light means it needs to recharge.
- ▶ Using of hanging hook:


Rotating the bracket to be used as the hanging hook, also you can remove the mini hook and hang this product on a cylinder.
- ▶ Sticking to iron object:

Place the bracket of this product on any kind of iron objects and it can stick to the surface with built-in magnet. The bracket also can rotate 60 degree.

Cautions:

- ▶ Don't point at eyes directly so as not to hurt the eyes.
- ▶ Do not use this product in which temperature more than 50 degrees or 20 degrees below zero centigrade. Otherwise led light source and the battery life will be reduced greatly.
- ▶ In order to assure the using life of the battery and the mechanical parts, please pay attention to the instructions below:
 - You should recharge it at least once a half of a year and keep the battery maintain the best states.
- ▶ Do not place this product in which temperature or humidity is high. Do not drop or hit this product.
- ▶ We do not give notice again if the parameter of this product changed.
- ▶ We reserve the final right to interpret this product.

Product Accessories:

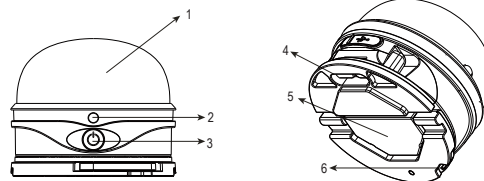

- 1 LED lamp shade
- 2 Charge indicator
- 3 Switch

- 4 Bracket
- 5 Magnet
- 6 Hanging hook

