

Mini led camping lantern /SB-6032B

www.SORBO.cn

RAINPROOF 1W LED MINI CAMPING LANTERN

This product adopts high power LED as the light source. With built-in Magnet and Hang hook, you can use it either stand on Iron metal surface or hang it on a strap which great for camping ,home use and other emergency condition.

Product Functions & Features

- ▶ Switch modes: Low Level---High Level---Fash---Off.
Charge the product with micro USB 5V power source, battery capacity indicator.
- ▶ Rainproof function IP43
- ▶ Max luminous flux is 60-65 Lm
- ▶ Built-in lithium battery circuit protection function, prevent overcharge or discharge.
- ▶ Sticking to iron object by built-in magnet, bracket can be 60 degrees rotation.
- ▶ Flexible use of hook design.

Main Technical Parameters

1) Lighting Parameters:

The Max. Luminous Flux of High Mode	60-65 Lm
The Max. Luminous Flux of Low Mode	20 Lm
High level lighting time after fully charged	3hours
Low level lighting time after fully charged	8 hours
Flash level lighting time after fully charged	9 hours

3) Main Parts Life-span:

Switch	5000 Times
The plastic part	5 Years
LED	50000 Hours

2) Parameters Of External Power Source :

Specification of charge port	micro USB (V8)
Input voltage	5-5.2 V
Max current	400±50 mA
Fully charged time	3±0.5 hours

4) Size And Weight :

Product size	Φ62*53 mm
Product weight	72g

5) Others:

Specification of built-in battery	450mAh, 3.7 V Lithium battery
LED specification	1W/Color Temp 6000-6500K


Operation Method :

- ▶ Lighting:
Switch mode : Low Level---High Level---Fash---Off
- ▶ Charging operation & Battery capacity indicator:
Charge its inside battery: open the micro USB port cover, plug in the 5V power, the red indicator will glow while charging and the green indicator will light while being fully charged.
- ▶ Using of hanging hook:
Rotating the bracket to be used as the hanging hook, also you can remove the mini hook and hang this product on a cylinder.
- ▶ Sticking to iron object:
Place the bracket of this product on any kind of iron objects and it can stick to the surface with built-in magnet. The bracket also can rotate 60 degree.

Cautions:

- ▶ Don't point at eyes directly so as not to hurt the eyes.
- ▶ Do not use this product in which temperature more than 50 degrees or 20 degrees below zero centigrade. Otherwise led light source and the battery life will be reduced greatly.
- ▶ In order to assure the using life of the battery and the mechanical parts, please pay attention to the instructions below:
You should recharge it at least once a half of a year and keep the battery maintain the best states.
- ▶ Do not place this product in which temperature or humidity is high. Do not drop or hit this product.
- ▶ We do not give notice again if the parameter of this product changed.
- ▶ We reserve the final right to interpret this product.

Product Accessories:

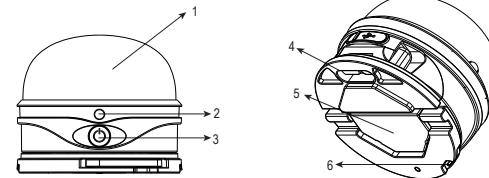

- 1 LED lamp shade
- 2 Charge indicator
- 3 Switch

- 4 Bracket
- 5 Magnet
- 6 Hanging hook

