

3 In 1 Emergency Auto Safety Tool

SB-2010/Life-saving impactive needle

www.SORBO.cn

Emergency safety tool includes life-saving impact needle, seatbelt cutter and lighting. Cranking for power to charge its inner battery. Life-saving impact needle is worked by pressing build-in spring to remove the needle, so as to smash the glass.

Functions:

- ▶ Cranking for power to charge its inner battery.
- ▶ Lighting and flashing alert.
- ▶ Life-saving impact needle.
- ▶ Seatbelt cutter.

Features:

- ▶ Cranking to generate power, no external batteries needed; Green, environmentally friendly, economical and safe.
- ▶ High brightness (3 LEDs), good for lighting.
- ▶ Life-saving impact needle breaks through windshield in urgent condition.
- ▶ Cutting the seatbelt in case of emergency.
- ▶ Novel, fashion and exquisite with high efficiency.

Main Technical Parameters

1) Lighting:

The external force of breaking the glass	$\geq 55\text{N}, \leq 75\text{N}$
The max. luminous flux	$\geq 9\text{ Lm}$
Lighting time after 1 minute cranking	$\geq 10\text{ Minutes}$
Flashing time after 1 minute cranking	$\geq 60\text{ Minutes}$
Lighting time after being charged fully	$\geq 80\text{ Minutes}$
Flashing time after being charged fully	$\geq 2\text{ Hours}$

2) Main parts life-span:

Switch	10000 Times
Seatbelt cutter	500 Times

The whole unit	5 Years (Seatbelt cutter uses more than 400 times.)
The plastic part	5 Years

3) Size and weight:

Product size	122*52*59 mm
Product weight	118 g

4) Others:


Specification of built-in battery	NI-MH battery 80mAh, 3.6 V
-----------------------------------	----------------------------

Operation Method :

- ▶ Lighting and Flashing: Forward switch at the first position to flash, forward at the second position to light.
- ▶ Charging: Hold the unit with one hand and crank the handle with the other at the speed of 3 cycles per second.
- ▶ Life-saving impact needle: Take off the protective cover, then stress the head onto the glass until the distance is less than 0.5mm, so as to smash the window.
- ▶ Seatbelt Cutter: Cutting the seatbelt by insider cutter.

Cautions:

- ▶ Don't stress the life-saving impact needle to human, so as not to hurt people.
- ▶ Don't put the solid objects with less than 3.5mm diameter into the cutter, so as not to hurt the cutter.
- ▶ Don't point at eyes directly, so as not to hurt the eyes.
- ▶ In order to assure the using life of the battery and the mechanical parts, please pay attention to the instructions below:
 - a) When the light is dim, it means the battery is lack of power badly, please turn off the light or crank it for a while.
 - b) Please crank it for at least 1 minute once a month.
- ▶ Do not place this product in where temperature or humidity is high; Do not drop or hit this product.
- ▶ The product will be a little hot if cranking for a long time.
- ▶ We do not give notice again if the parameter of this product changed.
- ▶ We reserve the final right to interpret this product.

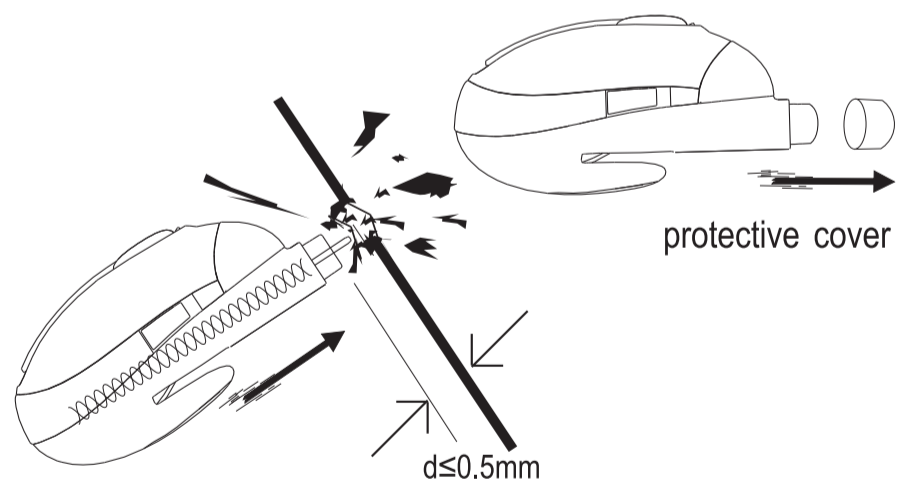

MADE IN CHINA